


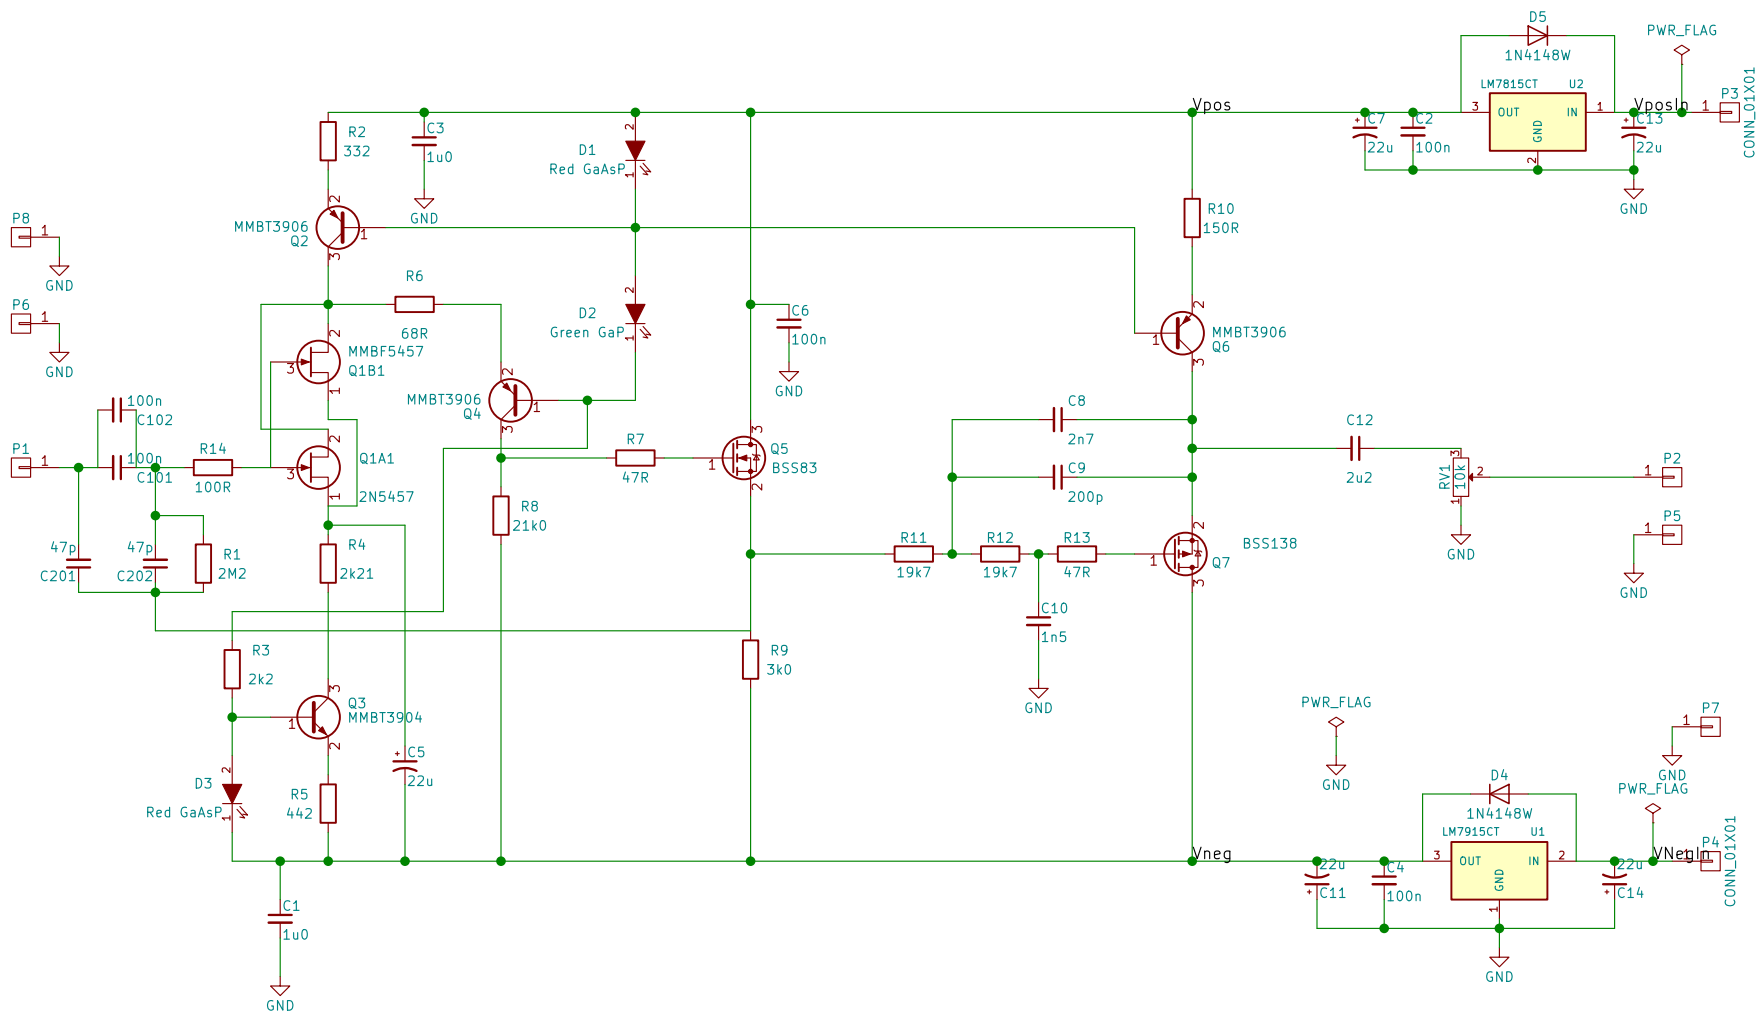

Stuffing options:

Q1A1 or Q1B1, but not both!
C101 or C102, but not both!
C201 or C202, but not both!

Power regulators and bypass caps, as necessary. Omit or jumper as required.

Original design by Richard Hester

Modifications and layout by Dave Platt

Sheet: /

File: ChargeSensitiveAmplifier.sch

Title: Charge Sensitive Preamplifier

Size: USLetter Date: 2016-03-08

KiCad E.D.A. kicad 4.0.7+dfsg1-1

Rev: 1.0

Id: 1/1